

Important Caution

- * Always make all connections before plugging the unit into an AC power outlet.
- * Do not leave the devices in a place with high temperature or high humidity.
- * Always do not handle the power cord with wet hands!
- * Keep the devices away from fire and heat sources.
- * Please fully charge the battery 8 hours before first operation, and recharge if no use for over three months.

Feature

 
- * Handy and fashion outward.
- * Preset 16 selectable UHF channels.
- * Using Lithium cell to provide long operation time.
- * Transmitter with built in condenser capsule.
- * LED display on both transmitters and receivers.
- * Charger TG-10CH2 provides 2 slots.
- * 2 way of wearing, neck-set and belt-pack.
- * 60m operation distance.



Parts Identification

TG-10T / TG-10R

Top Panel




Bottom Panel






Left Side Panel

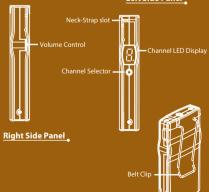

Back Panel

Parts Identification

 
TG-10CH2





Accessories



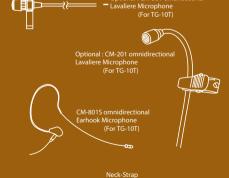



Specification



TG-10R

Frequency Preparation Carrier Frequency Range LED Display Controls

Audio Frequency Response Output connector Battery life Battery Dimension(mm)

502MHz~960MHz

1/8" Dummy stereo Phone Jack Lithium cell (3.7V, 1300mAh) 54mm(W)* 17mm(D)* 99mm(H)

TG-10T

Internal Microphone

Frequency Preparation Carrier Frequency Range RF Outputs Stability Frequency Deviation LED Display

Spurious Emissions Audio Frequency Response Microphone input connector Battery life Battery Dimension(mm)

Microphone PLL Synthesized Control

502MHz~960MHz 0.005% Controls Volume control

<-50 dBC

1/8" Mono Phone Jack Lithium cell (3.7V, 1300mAh) 54mm(W)* 17mm(D)* 99mm(H)

TG-10CH2

Number of charging slot Power requirement LED Indicator

Dimensions(mm)

12-18 VDC , 500mA Power connected: Flash green Full Charged : Turn off 85mm(W)* 75mm(D)* 41mm(H)

JT5°

www.jts.com.tw



Power On / OFF

- * Power On: Press "Power Switch" to turn on the power : the "Power Indicator" or will light up.
- * Power Off: Hold "Power Switch" for three seconds and release to turn off the power.



Notice: The "Power Indicator" will show green light when working normally, will turn red under low voltage.

Select Channel

* Hold "Channel Selector" for about 3 second, the decimal point in LED Display starts flashing, allowing you to change the channel. Then, cycling press "Channel Selector" to select a desired channel from preset 16 channels. (0-9,A-F)



Notice.1: The channel of the transmitter (TG-10T) must match that of the receiver (TG-10R).

Notice.2: The LED Display will stop flashing if no operation for about 6 seconds.

Connect Microphone or Earphone

* TG-10T: Plug "External Microphone" into "3.5mm



* TG-10R: Plug "an earphone" into "3.5mm Earphone Output Jack



Installation and Operation

Wearing and Operating

☆ TG-10T



Use the "Neck-Strap"

"external Microphone"

Use the "Neck-Strap" and the "Built-in Microphone"



Use the "Belt-Clip" and the "external Microphone"





Installation and Operation


Wearing and Operating

★ TG-10R



Installation and Operation

JT5°

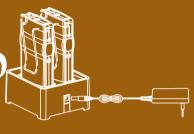

Notice 1: As soon as AC power is connected, the "Charging Indicator" will flash.

Notice 2: The "Charging Indicator" may turn flashing for selt-testing during charging to protect batteries from being damaged.



Use the "Neck-Strap and the

"Mono Earphone"

Adjust Volume

* TG-10T: Turn "Volume Control" Up or Down to adjust a suitable volume

JT5°



System Notice

"Reset Button" to restore the default settings.



* Power Saving Function: When the "Channel Selector is unused for about 9 seconds, the "Channel LED Display " will turn off.

F© C € 1856 ① 🗵

JT5 PROFESSIONAL CO., LTD.

No. 148, 9th Industry Road, Ta-Li Industrial Park, Taichung City, Taiwan, R.O.C.

59516-05