



## Professional Public Address System

---

# EMRM-906T TUNER/CD PLAYER



## OWNER'S MANUAL

---


Before operating, please read this manual completely.

### *FEATURES*

- Tuner/CD/MP3 player.
- VFD display.
- Song or paragraph selection player.
- Automatic play after the AC power resume.
- USB port.


Left blank for memo

## ***FRONT PANEL***

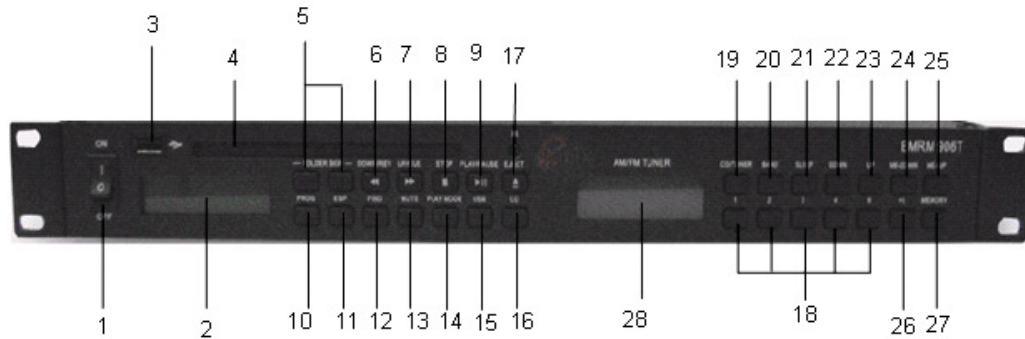

- |  |                           |
|--|---------------------------|
| 1 Power switch(1 is power on and the “power LED” is on ) | 15 USB                    |
| 2 Display Screen (CD player)                             | 16 CD                     |
| 3 USB Input  | 17 Eject                  |
| 4 Disc Input   | 18 FM Channel 1-5         |
| 5 Folder Select  | 19 CD / Tuner             |
| 6 Next Track   | 20 Band                   |
| 7 Previous Track   | 21 Sleep                  |
| 8 Stop   | 22 Frequency Down         |
| 9 Play / Pause   | 23 Frequency Up           |
| 10 Program   | 24 Memory Up              |
| 11 Escape  | 25 Memory Down            |
| 12 Find  | 26 Channel +5             |
| 13 Mute  | 27 Memory                 |
| 14 Play Mode   | 28 Display Screen (Tuner) |

## ***REAR PANEL***

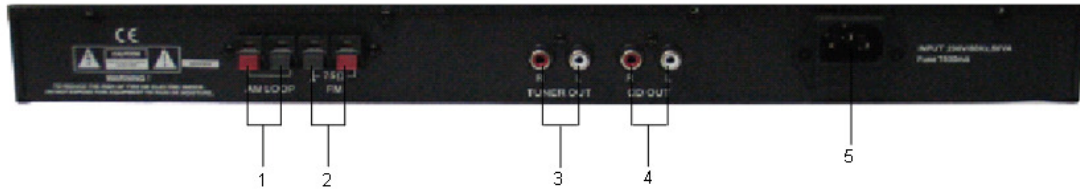

- |                |              |
|----------------|--------------|
| 1 AM Antenna   | 4 CD Output  |
| 2 FM Antenna   | 5 Power Cord |
| 3 Tuner Output |              |

## ***OPERATION***

1. **Disk Load / Unload** Press key **▲** to open the CD deck, put in or take out a disk and then press key **▲** again for resetting the deck.
2. **Play or Pause** After the deck reset it will play in order automatically. Press key **▶||** while playing for pause, Press the key again for releasing.
3. **Option Play** Press **▶▶** or **◀◀** and **◀◀** or **▶▶** while playing, we can select any song or any paragraph for play.
4. **Stop** Press key **■** to stop in any time.
5. **Folder Skip** Press to select folder at USB or CD.
6. **Play Mode** Press to select song sequence.
7. **USB** Press to play song from USB.
8. **CD** Press to play song from CD.
9. **CD / Tuner** Press to select play source from CD player or Tuner.
10. **Band** Press to select AM/FM for tuner.
11. **UP / DOWN** Press UP and Down to set the frequency for tuner. Press and hold for auto scanning.
12. **Memory** Press and hold to save the tuner channel.

## ***SPECIFICATIONS***

<b>Frequency response</b>	<b>20Hz-20kHz</b>	
<b>Signal to Noise Ratio</b>	MP3 / CD	1kHz > = 60dB
	FM	1mV > = 50dB
	AM	5mV/M > = 35dB
<b>Frequency Band</b>	FM	87.5 – 108MHz
	AM	522 – 1620kHz
<b>THD</b>	MP3 / CD	1kHz > = 0.3%
	FM	1mV, 40kHz < = 1%
	AM	5mV/M < = 2%
<b>USB Interface</b>	Yes	
<b>Protection</b>	AC fuse	
<b>Power Requirement</b>	AC230V/50Hz	
<b>Dimensions (W x H x D)</b>	430 × 44.25 × 250mm	
<b>Gross weight</b>		
<b>Net weight</b>		

Specifications are subject to be changed without notice.

### **CAUTION**

- When the “Power switcher” is off, please pull out the power cord from the socket. Please keep the equipment out of water.
- To reduce the risk of electric shock, do not remove the cover.
- No user parts inside. Refer servicing to qualified service personnel.