



# Diamond Studio BT series

## QUICK START GUIDE

 
Congratulations on the purchase of your Diamond Studio -BT studio monitor. We take great pride in engineering and building every Wharfedale Pro product and wish to thank you for entrusting us with your audio.

From the time Gilbert Briggs built his first loudspeaker in 1932, to the present day, we have maintained the same standard of quality in components, workmanship and performance.

Please take the time to read this guide completely in order to get the most from your new monitors.

Your full user manual can also be downloaded from [www.wharfedalepro.com](http://www.wharfedalepro.com)

### REAR INPUT CONTROLS

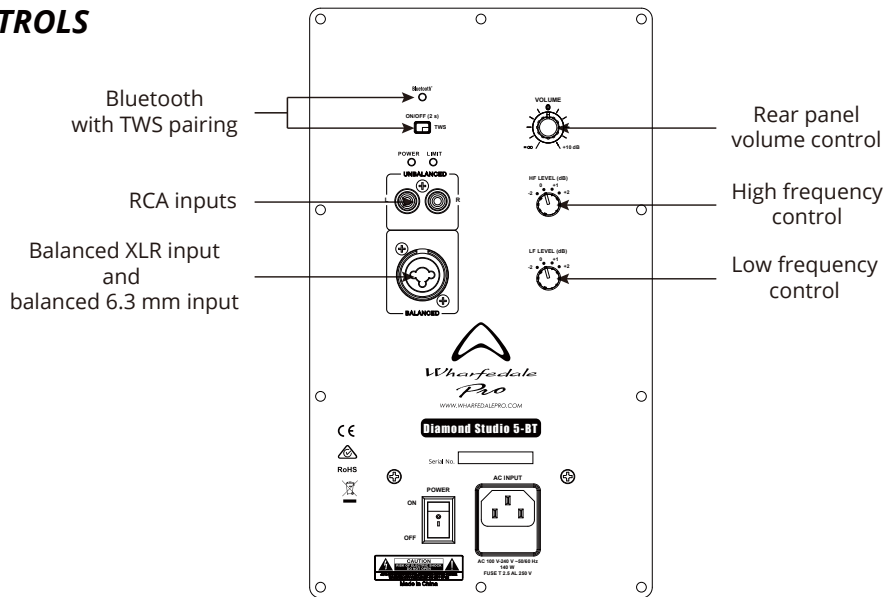

### BLUETOOTH OPERATION - SINGLE SPEAKER USE ONLY.

 
(Always turn volume down on rear to a safe level when making connections)

- 1 - Turn the Diamond Studio -BT on, press and hold the Bluetooth button until the LED turns a flashing Blue.
- 2 - On your mobile device, select Diamond Studio -BT
- 3 - The LED on the rear of the Diamond Studio will stop flashing and will turn solid Blue. Its paired!
- 4 - Play audio from the mobile device ensuring the output volume is appropriately set.


### BLUETOOTH OPERATION - TWS Link mode.

(Always turn volume down on rear to a safe level when making connections. Important : Turn off Bluetooth on your mobile device until TWS linking has been established)

- 1 - Turn the Diamond Studio -BT on. Press and hold the Bluetooth button until the LED turns a flashing Blue.
- 2 - Double tap the Bluetooth button (0.7 sec). The LED will flash between RED and BLUE. (It is looking for another Diamond Studio -BT)
- 3 - On the second Diamond Studio -BT monitor, repeat steps 1 and 2 above.
- 4 - When the monitors have paired between themselves, the LEDs will change from flashing RED and BLUE, to be Blue. One monitor will be flashing blue. It's waiting for you to connect....
- 5 - On your mobile device, select Diamond Studio -BT. If pairing is unsuccessful, select the other Diamond Studio -BT in your list of Bluetooth devices.
- 6 - Play audio from the mobile device ensuring the output volume is appropriately set.

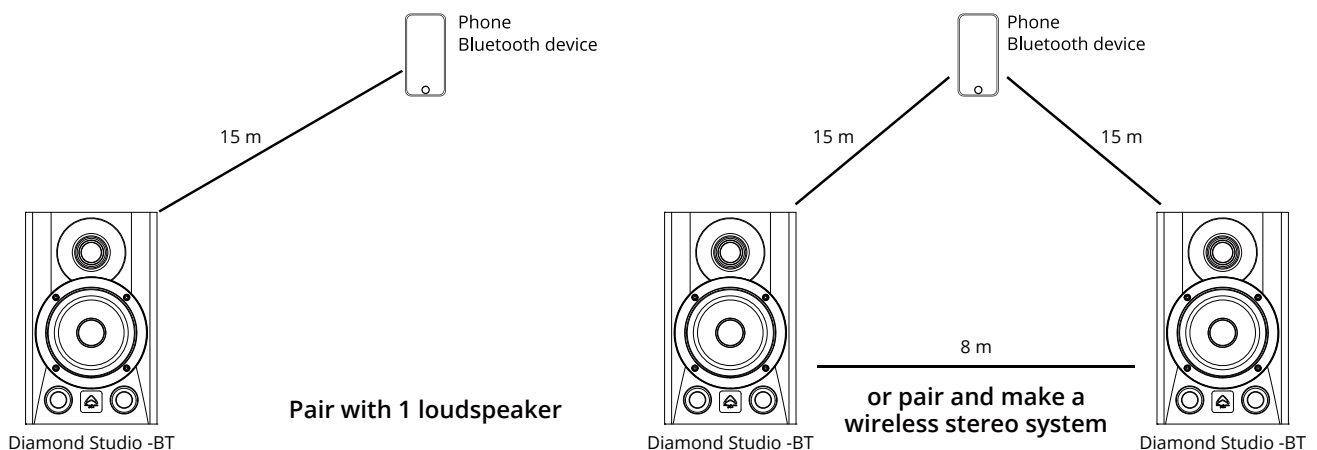


## FEATURE OVERVIEW

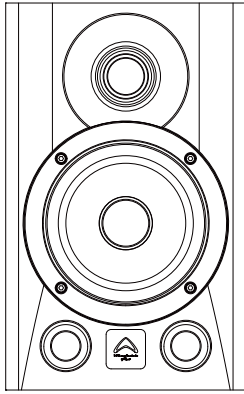 

### Diamond Studio 5-BT

 - Bluetooth, 6.3 mm, XLR and RCA inputs
- TWS linking
- 5.0" Custom fibreglass cone Wharfedale Pro LF driver
- Bi-amplified with two refined amplifiers
- Independent High and Low frequency level controls
- Honest, uncoloured sound
- 140 Watts Continuous
- 280 Watts Peak

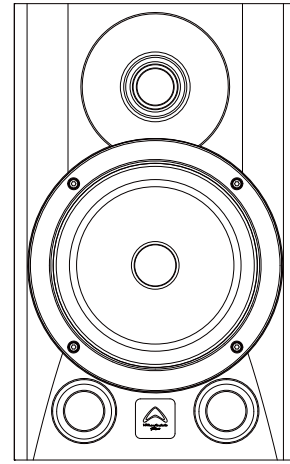

### Diamond Studio 7-BT

- Bluetooth, 6.3 mm, XLR and RCA inputs
- TWS linking
- 6.5" Custom fibreglass cone Wharfedale Pro LF driver
- Bi-amplified with two refined amplifiers
- Independent High and Low frequency level controls
- Honest, uncoloured sound
- 150 Watts Continuous
- 300 Watts Peak

## IMPORTANT SAFETY INSTRUCTIONS

Before installing or using this product read all these instructions!

Keep these instructions. Heed any warnings. Follow all instructions.

Before making any connections, switch all the devices in your system off at the mains.

Set the volume control at minimum when you switch on your system or change sources and turn the level up gradually.

Ensure that all devices in the system are correctly wired.

DO NOT use this product at full volume.

DO NOT subject your loudspeakers to excessive cold, heat, humidity, or sunlight.

DO NOT place heavy objects on top of loudspeakers.

DO NOT dismantle the loudspeaker. There are no user serviceable parts inside, and you will void the warranty by doing so.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

## WHARFEDALE PRO LIMITED WARRANTY

Wharfedale Pro products are warranted of manufacturing or material defects for a period of one year from the original date of purchase. In the event of malfunction, contact your authorized Wharfedale Pro dealer or distributor for information.

\*Be aware that warranty details may differ from country to country. Contact your dealer or distributor for information.

These terms do not infringe your statutory rights.



### WHARFEDALE PROFESSIONAL

IAG House, 13/14 Glebe Road, Huntingdon, Cambridgeshire, PE27 7DL, UK

[www.wharfedalepro.com](http://www.wharfedalepro.com)

Wharfedale Professional reserves the right to alter or improve specifications without notice.

All rights reserved © 2021 Wharfedale Pro. Wharfedale Pro is a member of the IAG Group.